




INSTALLATION GUIDELINES

Vapor Barrier Products

STEP 1A: Ground Surface Preparation—Earth Base

Select the suitable Barrier-Bac product (VB-250, 11 mil or VB-350, 16 mil) and ensure the installation surface is relatively smooth. Barrier-Bac should be unrolled to completely cover the pour area.

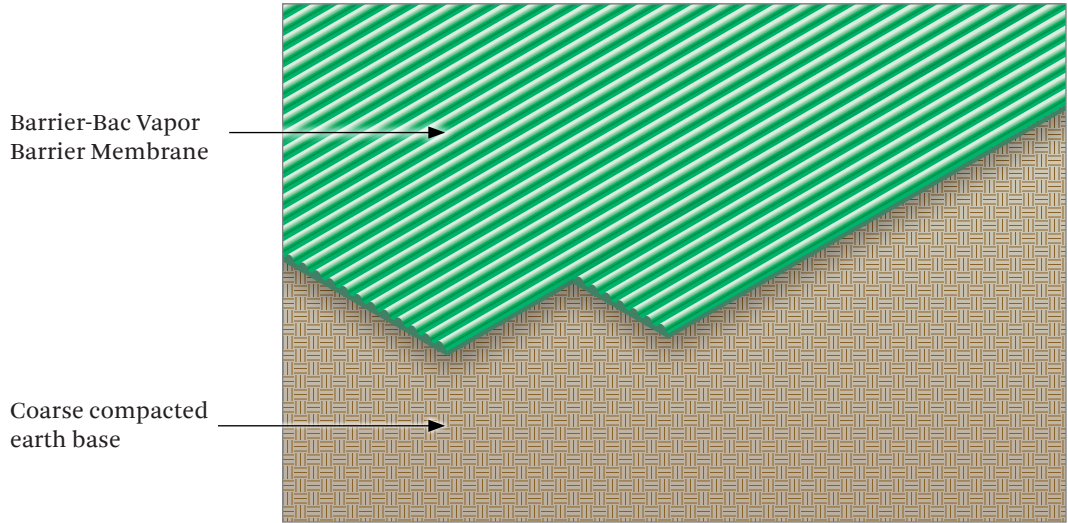

STEP 1B: Ground Surface Preparation—Aggregate Base

Although Barrier-Bac products are extremely tough, installation is easier and more effective when done over a smooth base. It is optional to have a layer of granular fill under the Barrier-Bac.

